

REMINGTON®

Lithium
POWER series

Use and Care Guide

PR1340, PR1362, PR1385



Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

DANGER

To reduce the risk of electric shock:

- For connection of the power supply unit to a power source not in the U.S.A. and Canada, use an attachment plug adaptor of the proper configuration for the power outlet.
- Do not reach for a plugged in appliance that has fallen into water. Unplug it immediately.
- Models PR1340, PR1362, and PR1385 can be used wet or dry. The shaver can be used in the shower and rinsed under the faucet for cleaning.
- Detach the appliance from the power supply cord before cleaning.
- Do not submerge in water.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink. Do not place or drop into water or other liquid.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, or individuals with certain disabilities or special needs.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug or if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any of the appliance's openings.
- Household use only.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach the plug to the appliance, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Always pull on cord plug to unplug from wall socket. Never pull on electric cord.
- Do not plug or unplug this appliance when your hands are wet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Detach removable power cords from appliance for storage.
- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.
- Shavers, including the trimmer, are for use on facial hair only. They should not be used for shaving the hair on your head or any other part of your body.

SAVE THESE INSTRUCTIONS

Product Features



SHAVER PARTS

- | | |
|---|----------------------------------|
| 1. PowerFlex 360° Pivoting head and cutter assembly | 5. Charging indicator |
| 2. Head release button | 6. Power port |
| 3. Precision Plus Heads | 7. Pop-up Trimmer |
| 4. On/Off push button | 8. Power adaptor |
| | 9. Stubble attachment/Head guard |

Product may vary slightly from what is illustrated.

Which Model Is Yours?

FEATURE	PR1340	PR1362	PR1385
POWER SYSTEM	cordless	cordless	cordless
FULL CHARGE TIME	4 hrs.	90 min.	90 min.
CORDLESS SHAVE TIME*	50 min.	60 min.	60 min.
QUICK CHARGE	no	yes	yes
INDICATORS	charging	3 stage LED	3 stage LED
VOLTAGE TYPE	worldwide	worldwide	worldwide
TURBO	no	no	yes
WATER RESISTANCE	Wet/Dry	Wet/Dry	Wet/Dry
REPLACEMENT PART NO.	SPR-PR13	SPR-PR13	SPR-PR13

*Some shave times vary by version of each model. To identify your model, refer to the packaging or on the back of the shaver.

Turbo – PR1385

Power boost that provides an acceleration of the motor speed to shave through thick facial hair

Water Resistance

Dry – Shaver can only be used dry. Can be cleaned with cleaning brush.

Wet/Dry – Shaver can be used in the shower and with shaving gels. Can be cleaned by rinsing under running water.

Power System

Cordless – shaver can only be used without the power cord.

Quick Charge

Shaver will charge long enough for one shave in 5 minutes.

Indicators

Charging Indicator – PR1340

- Green LED light will glow solid during charging. LED light will turn off at full charge.

3 Stage LED – PR1362, PR1385

- Blinks rapidly to signal low battery.
- Slowly flashes to signal charging.
- Solid green when fully charged, then turns off after 5 minutes.

Voltage Type

Worldwide Voltage – Shaver automatically adapts to an outlet voltage between 100V and 240V.

Charging

Before using, read the important safety instructions in front of the manual.

1. Plug power adaptor into shaver. (Diagram A)
2. Plug adaptor into wall outlet. (Diagram B)
3. For future charge times, see full charge time for your model.
4. Use shaver until recharge is required.

For shavers equipped with a quick charge:

A 5 minute quick charge will allow for 3 minutes of shaving.

CAUTION!

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

Shaving

1. Press power button to turn on. (Diagram C)
2. Shave face and neck using short, circular strokes. (Diagram D)

Stubble

To achieve a stubble look instead of a clean shave, affix the Stubble attachment/Head guard over the cutter assembly and shave as usual.

Trim



1. Slide down trimmer release button to engage trimmer. (Diagram E)
2. Trim long, difficult hairs and side burns. (Diagram F)
3. Close trimmer by pressing down. (Diagram G)

Shaving Tips (Dry)

- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Ensure your skin is dry and free of oils. Try using Remington's FaceSaver pre-shave powder to help the shaver glide across the skin.
- Always hold the shaver at a right angle to the skin so that all three heads are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Use moderate to slow circular stroking movement.
- The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin in order to avoid increased irritation and damage to the rotary heads.

We recommend that you use your new shaver daily for up to four weeks to allow time for your hair and skin to become accustomed to the new shaving system.

Shaving Tips With Gel or Foam (In Shower or Over the Sink)

We recommend that you use the shaver in the shower for optimal performance.


- NOTE: In order to ensure optimal performance, thoroughly rinse the shaver head under water during and after shaving.
1. Apply water to face and neck area.
 2. Apply shave gel or foam to applicable shaving area.
 3. Rinse shaver head under water.
 4. Shave face and neck using short, circular strokes.
 5. Throughout the shave, regularly rinse shaver head under water to avoid residue build up.
 6. When finished shaving, rinse face.
 7. Thoroughly rinse shaver head of all gel or foam.
 8. Follow cleaning and care instructions located on page 8.

Cleaning and Care



PR1340, PR1362, and PR1385 are wet/dry appliances. These shavers may be cleaned under warm water.

- NOTE: When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.
- CAUTION!
- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
 - To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.

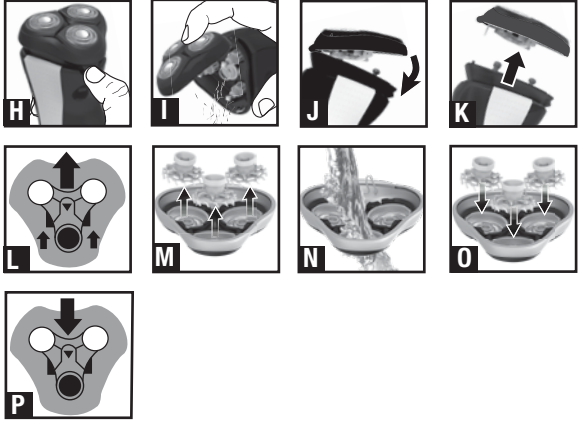

- Daily:
1. Pull off Stubble attachment/Head guard, if using, and rinse attachment.
 2. Press the release button on front of shaver and open head assembly. (Diagram H)
 3. Tap out excess hair shavings. (Diagram I)
 4. Rinse the head of the shaver in running water. NEVER submerge the shaver in water!
 5. Leave head open for drying.
 6. Snap head closed before using the shaver again. (Diagram J)
 7. Reattach Stubble attachment/Head guard to protect shaving head until next use.

- Weekly:
1. Perform the daily cleaning steps 1 and 2.
 2. Remove the cover from the hair pocket assembly. (Diagram K) Place the body of the shaver aside to ensure that it will not get wet.
 3. Slide the blue inner cutter carrier down to release it from the assembly. (Diagram L)
 4. Remove the inner cutter carrier away from the cutters.
 5. Remove the cutters. (Diagram M)
 6. Thoroughly rinse away any debris from inner and outer cutters. (Diagram N)
 7. Replace the inner cutters. Match the hub colors of the inner and outer cutters (Diagram O)
 8. Place the inner cutter carrier back into position and lock into place. (Diagram P)
 9. Lubricate each cutter with household oil.
 10. Align the spring hinge into the slot at the back of the hair pocket and press into place. Snap the head assembly closed. (Diagram J)
- Trimmer: Lubricate teeth with oil every six months

Product Disposal

When your rechargeable shaver reaches the end of its useful life, the Lithium batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver with the batteries.

- To Remove the Rechargeable Battery:
1. Unplug the shaver.
 2. Run shaver until motor stops.
 3. Remove head from shaver (Press release button and pull head straight away from shaver body)
 4. Using a small screwdriver pry front cover from shaver body.
 5. Remove four screws located on front of shaver.
 6. Remove rear cover from inner housing to expose batteries.
 7. Pry batteries free from circuit board and cut wires.
 8. Dispose of batteries.

This device uses one of the following types of rechargeable batteries: nickel metal hydride (NiMH), nickel cadmium (Ni-Cd) or Lithium Ion (Li-Ion) (see included battery for indication of type).

CAUTION: ALL RECHARGEABLE BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH APPLICABLE STATE AND LOCAL REGULATIONS. DO NOT PUT IN FIRE OR MUTILATE, AS THE BATTERY MAY BURST OR RELEASE TOXIC MATERIALS. DO NOT SHORT-CIRCUIT, AS THIS MAY CAUSE BURNS.

Spectrum Brands, Inc. is a proud participant in the EPA-approved Rechargeable Battery Recycling Call2Recycle™, which collects and recycles these batteries at the end of their useful life when taken out of services in the United States or Canada. The RBRC® program provides a convenient alternative to placing used

LiFePO4 batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERY™ or visit www.call2recycle.org for information on LiFePO4 battery recycling and disposal bans/restriction in your area. Spectrum Brands, Inc.'s involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

How To Order Shaver Accessories

- Maintain your shaver's peak performance! Keep Your Shaver Performing Like New!
- Because your satisfaction is important to us, we make it simple for you to keep your new shaver performing at its peak.
 - For the best possible shave, it is necessary to replace the heads and cutters on your shaver every 12 months.
 - Remington makes this easy!

Your shaver uses replacement part SPR-PR13.

- Two Easy Ways to Order!
1. Call! U.S. and Canadian residents call 1-800-392-6544
 2. Order Online at RemingtonProducts.com



- It is very important to replace your head and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed:
- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
 - **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

Warranty

Limited Three-Year Warranty
Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a three-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. and Canada

- Warranty excludes:
- Heads and cutters

- KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.
- This warranty does not cover products damaged by the following:
- Accident, misuse, abuse or alteration of the product
 - Servicing by unauthorized persons
 - Use with unauthorized accessories
 - Connecting it to incorrect current and voltage
 - Wrapping cord around appliance causing premature wear and breakage
 - Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO THREE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Performance Guarantee

Spectrum Brands, Inc. Money-back Offer
If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington Men's Shave and Groom 60-Day Money Back Guarantee*
If within 60 days after purchasing any Remington® brand Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada
*Applies to U.S. customers' returns only.
**Terms and conditions apply.

- Terms and Conditions
1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
 2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® brand Men's Shave and Groom product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
 3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
 4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
 5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
 6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
 7. Please allow 4–6 weeks to receive your refund by check.

Questions or comments: Call 800-736-4648 in the U.S.
Or visit RemingtonProducts.com

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562
Dist. by: Spectrum Brands Canada Inc.
255 Longside Drive, Unit 101
Mississauga, ON L5W 1L8

Remington is a trademark of Spectrum Brands, Inc. All other marks are the property of their respective owners.

TYPE: PR1340, PR1360, R20A
© 2018 Spectrum Brands, Inc. 9/18 23293
Made in China
Contains a listed adaptor.