



## ENGLISH

**KITCHEN SCALE VT-8008**  
The scale is used for weighing dry, liquid and granular products, measuring the environment temperature and displaying current time.

**DESCRIPTION**

1. Weighing platform
2. Weighing result display
3. Current time display
4. Temperature display
5. Measurement unit selection/hours and minutes setting button **Unit**
6. Fixed error compensation button **Tare**
7. On/Off, hours/minutes selection, temperature measurement unit selection button **IT**
8. Hours/minutes setting button **Time**
9. Battery compartment lid

**SAFETY MEASURES**  
Before using the unit, read this instruction manual carefully and keep it for future reference.  
Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakdown and cause harm to the user or damage to his/her property.

- Handle your scale with care, as it is a precision instrument, do not subject it to high or low temperatures, high humidity, never expose to direct sunlight and do not drop the scale.
- Do not use the scale outdoors.
- Avoid getting liquid into the scale body, this appliance is not waterproof. Do not store or use the scale in a room with high humidity (above 80%), make sure you use the scale does not come into contact with water or other liquids as this may cause failure of scale indication or its damage.
- Place the scale on a flat steady surface.
- Do not put food products on the weighing platform if their weight exceeds the maximal capacity of the scale.
- This unit is not intended for usage by children, place the unit away from children.
- The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.
- Do not leave children unattended to prevent using the unit as a toy.

**Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.  
• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.  
**Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

- To avoid damages, transport the unit in the original package only.
- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the batteries in time.
- Keep the unit out of reach of children and disabled persons.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).

**THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.**

**USING THE SCALE**  
**After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.**

- Unpack the scale, remove any stickers that can prevent unit operation.
- Place the weighing platform (1) and the scale body with a soft slightly damp cloth, and then wipe dry.

**Battery installation**

- Open the battery compartment lid (9) and insert a CR2032 battery (supplied with the unit), following the polarity.
- Install the battery compartment lid (9) back to its place.

**Note:** The unit can be supplied with the battery installed in the battery compartment. In this case an isolation insert is inserted preventing discharge. If there is an isolation insert in the battery compartment, remove the battery compartment lid, to remove the isolation insert and install battery compartment lid back to its place.

**Battery replacement**

- When the battery is low, the display (2, 3, 4) contrast reduces and the display (2) shows Lo symbol
- If the scale was switched off because of low battery or the symbol "Lo" appeared on the display (2), replace the battery. For this open the battery compartment lid (9), replace the old battery with a new one, strictly following the polarity, then close the battery compartment lid (9).
- If you are not using the scale for a long time, remove the battery from the battery compartment.

**Operating buttons**  
The operating buttons of the scale are touch-sensitive, so you only need to touch slightly the marked point for each button to activate it.

**CURRENT TIME DISPLAYING**  
If there is a battery in the battery compartment, the current time indication is permanently shown on the display (3) regardless of whether the scale is switched on or not.

**Time setup**

1. Press and hold the **Time** button until the hour indications on the display (3) start flashing.

**Notes:**

- When you install or replace the battery, the time **AM12:00** will be shown on the display (3) and the hours indications will start flashing.
- If you don't press any buttons within 10 seconds, the indications on the display (3) will be shown constantly.

2. Consequently press the button **Time** to set the desired hours. To enter the hours indications press the button **IT**. After you enter the hours data, the minutes indications will start flashing.

**Note:**

- This model uses **12 hour** format of current time indication. When you set the desired time, pay attention to the symbols **AM/PM**, alternately appearing in the left part of the display (3). **AM** indicates time before noon, **PM** - after noon.

3. Consequently press the button **Time** to set the desired minutes. To enter the minutes indications press the button **IT**. Time setup is finished.

**WEIGHING INGREDIENTS**  
**Install the scale on a flat steady surface.**

1. To switch the scale on, touch the button (7) **IT**, first the symbols **HELLO**, and then the symbol **Lo** will appear on the display.

**Notes:**

- The symbol **Lo** shown on the display (2) indicates that you can start weighing.
- When you install or replace the battery, the weight measurement units **g** are used (by default).
- If the indications on the display (2) are not equal to zero, touch the **Tare** button (6). The indications will be set to zero. Select the required weight measurement units by consequently touching the button (5) **Unit**, the following symbols will appear on the display (2):
  - g – weight of food product(s) in grams;
  - oz – weight of product(s) in ounces;
  - kg – weight of product(s) in kilograms.

**Note:**  
- To weight liquid and granular products, place an appropriate container on the platform (1) and then set the display indications to zero by touching

ing the **Tare** button (6). The tare symbol  $\rightarrow$  will appear in the left part of the display (2) if the container weight is more than 500 g.

2. Put the ingredient(s) on the weighing platform (1). The weight of the ingredient(s) will be shown on the display (2), according to the selected measurement units.
3. To switch the scale off, remove the ingredients from the platform (1) and touch the **IT** button (7).

**Notes:**

- Symbols **EEEE** on the display (2) indicate exceeding of the scale maximal capacity of **10 kg**, remove food products from the scale immediately to prevent its damage.
- The symbol **UnitSt** on the display (3) indicates that the weight of the products on the scale is unstable or the scale is placed on an unsteady surface. Place the scale on a flat steady surface.
- The scale will be switched off automatically after **2 minutes** of non-operation.

**TARE FUNCTION**  
If you want to measure the weight of several ingredients without removing the previous ones from the platform (1), proceed as follows.

1. Place the scale on a flat surface.
2. To switch the scale on, touch the **IT** button (7), the symbol **Lo** will appear on the display.

**Notes:**

- The symbol **Lo** shown on the display (2) indicates that you can start weighing. If the indications on the display (2) are not equal to zero, touch the **Tare** button (6), the indications will be set to zero.
- Use the scale outdoors.
- Do not use the scale outdoors.
- Avoid getting liquid into the scale body, this appliance is not waterproof. Do not store or use the scale in a room with high humidity (above 80%), make sure you use the scale does not come into contact with water or other liquids as this may cause failure of scale indication or its damage.
- Place the scale on a flat steady surface.
- Do not put food products on the weighing platform if their weight exceeds the maximal capacity of the scale.
- This unit is not intended for usage by children, place the unit away from children.
- The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.
- Do not leave children unattended to prevent using the unit as a toy.

**Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.  
• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.  
**Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

- To avoid damages, transport the unit in the original package only.
- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the batteries in time.
- Keep the unit out of reach of children and disabled persons.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).

**THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.**

**USING THE SCALE**  
**After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.**

- Unpack the scale, remove any stickers that can prevent unit operation.
- Place the weighing platform (1) and the scale body with a soft slightly damp cloth, and then wipe dry.

**Battery installation**

- Open the battery compartment lid (9) and insert a CR2032 battery (supplied with the unit), following the polarity.
- Install the battery compartment lid (9) back to its place.

**Note:** The unit can be supplied with the battery installed in the battery compartment. In this case an isolation insert is inserted preventing discharge. If there is an isolation insert in the battery compartment, remove the battery compartment lid, to remove the isolation insert and install battery compartment lid back to its place.

**Battery replacement**

- When the battery is low, the display (2, 3, 4) contrast reduces and the display (2) shows Lo symbol
- If the scale was switched off because of low battery or the symbol "Lo" appeared on the display (2), replace the battery. For this open the battery compartment lid (9), replace the old battery with a new one, strictly following the polarity, then close the battery compartment lid (9).
- If you are not using the scale for a long time, remove the battery from the battery compartment.

**Operating buttons**  
The operating buttons of the scale are touch-sensitive, so you only need to touch slightly the marked point for each button to activate it.

**CURRENT TIME DISPLAYING**  
If there is a battery in the battery compartment, the current time indication is permanently shown on the display (3) regardless of whether the scale is switched on or not.

**Time setup**

1. Press and hold the **Time** button until the hour indications on the display (3) start flashing.

**Notes:**

- When you install or replace the battery, the time **AM12:00** will be shown on the display (3) and the hours indications will start flashing.
- If you don't press any buttons within 10 seconds, the indications on the display (3) will be shown constantly.

2. Consequently press the button **Time** to set the desired hours. To enter the hours indications press the button **IT**. After you enter the hours data, the minutes indications will start flashing.

**Note:**

- This model uses **12 hour** format of current time indication. When you set the desired time, pay attention to the symbols **AM/PM**, alternately appearing in the left part of the display (3). **AM** indicates time before noon, **PM** - after noon.

3. Consequently press the button **Time** to set the desired minutes. To enter the minutes indications press the button **IT**. Time setup is finished.

**WEIGHING INGREDIENTS**  
**Install the scale on a flat steady surface.**

1. To switch the scale on, touch the button (7) **IT**, first the symbols **HELLO**, and then the symbol **Lo** will appear on the display.

**Notes:**

- The symbol **Lo** shown on the display (2) indicates that you can start weighing.
- When you install or replace the battery, the weight measurement units **g** are used (by default).
- If the indications on the display (2) are not equal to zero, touch the **Tare** button (6). The indications will be set to zero. Select the required weight measurement units by consequently touching the button (5) **Unit**, the following symbols will appear on the display (2):
  - g – weight of food product(s) in grams;
  - oz – weight of product(s) in ounces;
  - kg – weight of product(s) in kilograms.

**Note:**  
- To weight liquid and granular products, place an appropriate container on the platform (1) and then set the display indications to zero by touching

ing the **Tare** button (6). The tare symbol  $\rightarrow$  will appear in the left part of the display (2) if the container weight is more than 500 g.

2. Put the ingredient(s) on the weighing platform (1). The weight of the ingredient(s) will be shown on the display (2), according to the selected measurement units.
3. To switch the scale off, remove the ingredients from the platform (1) and touch the **IT** button (7).

**Notes:**

- Symbols **EEEE** on the display (2) indicate exceeding of the scale maximal capacity of **10 kg**, remove food products from the scale immediately to prevent its damage.
- The symbol **UnitSt** on the display (3) indicates that the weight of the products on the scale is unstable or the scale is placed on an unsteady surface. Place the scale on a flat steady surface.
- The scale will be switched off automatically after **2 minutes** of non-operation.

**TARE FUNCTION**  
If you want to measure the weight of several ingredients without removing the previous ones from the platform (1), proceed as follows.

1. Place the scale on a flat surface.
2. To switch the scale on, touch the **IT** button (7), the symbol **Lo** will appear on the display.

**Notes:**

- The symbol **Lo** shown on the display (2) indicates that you can start weighing. If the indications on the display (2) are not equal to zero, touch the **Tare** button (6), the indications will be set to zero.
- Use the scale outdoors.
- Do not use the scale outdoors.
- Avoid getting liquid into the scale body, this appliance is not waterproof. Do not store or use the scale in a room with high humidity (above 80%), make sure you use the scale does not come into contact with water or other liquids as this may cause failure of scale indication or its damage.
- Place the scale on a flat steady surface.
- Do not put food products on the weighing platform if their weight exceeds the maximal capacity of the scale.
- This unit is not intended for usage by children, place the unit away from children.
- The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.
- Do not leave children unattended to prevent using the unit as a toy.

**Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.  
• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.  
**Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

- To avoid damages, transport the unit in the original package only.
- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the batteries in time.
- Keep the unit out of reach of children and disabled persons.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).

**THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.**

**USING THE SCALE**  
**After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.**

- Unpack the scale, remove any stickers that can prevent unit operation.
- Place the weighing platform (1) and the scale body with a soft slightly damp cloth, and then wipe dry.

**Battery installation**

- Open the battery compartment lid (9) and insert a CR2032 battery (supplied with the unit), following the polarity.
- Install the battery compartment lid (9) back to its place.

**Note:** The unit can be supplied with the battery installed in the battery compartment. In this case an isolation insert is inserted preventing discharge. If there is an isolation insert in the battery compartment, remove the battery compartment lid, to remove the isolation insert and install battery compartment lid back to its place.

**Battery replacement**

- When the battery is low, the display (2, 3, 4) contrast reduces and the display (2) shows Lo symbol
- If the scale was switched off because of low battery or the symbol "Lo" appeared on the display (2), replace the battery. For this open the battery compartment lid (9), replace the old battery with a new one, strictly following the polarity, then close the battery compartment lid (9).
- If you are not using the scale for a long time, remove the battery from the battery compartment.

**Operating buttons**  
The operating buttons of the scale are touch-sensitive, so you only need to touch slightly the marked point for each button to activate it.

**CURRENT TIME DISPLAYING**  
If there is a battery in the battery compartment, the current time indication is permanently shown on the display (3) regardless of whether the scale is switched on or not.

**Time setup**

1. Press and hold the **Time** button until the hour indications on the display (3) start flashing.

**Notes:**

- When you install or replace the battery, the time **AM12:00** will be shown on the display (3) and the hours indications will start flashing.
- If you don't press any buttons within 10 seconds, the indications on the display (3) will be shown constantly.

2. Consequently press the button **Time** to set the desired hours. To enter the hours indications press the button **IT**. After you enter the hours data, the minutes indications will start flashing.

**Note:**

- This model uses **12 hour** format of current time indication. When you set the desired time, pay attention to the symbols **AM/PM**, alternately appearing in the left part of the display (3). **AM** indicates time before noon, **PM** - after noon.

3. Consequently press the button **Time** to set the desired minutes. To enter the minutes indications press the button **IT**. Time setup is finished.

**WEIGHING INGREDIENTS**  
**Install the scale on a flat steady surface.**

1. To switch the scale on, touch the button (7) **IT**, first the symbols **HELLO**, and then the symbol **Lo** will appear on the display.

**Notes:**

- The symbol **Lo** shown on the display (2) indicates that you can start weighing.
- When you install or replace the battery, the weight measurement units **g** are used (by default).
- If the indications on the display (2) are not equal to zero, touch the **Tare** button (6). The indications will be set to zero. Select the required weight measurement units by consequently touching the button (5) **Unit**, the following symbols will appear on the display (2):
  - g – weight of food product(s) in grams;
  - oz – weight of product(s) in ounces;
  - kg – weight of product(s) in kilograms.

**Note:**  
- To weight liquid and granular products, place an appropriate container on the platform (1) and then set the display indications to zero by touching

ing the **Tare** button (6). The tare symbol  $\rightarrow$  will appear in the left part of the display (2) if the container weight is more than 500 g.

2. Put the ingredient(s) on the weighing platform (1). The weight of the ingredient(s) will be shown on the display (2), according to the selected measurement units.
3. To switch the scale off, remove the ingredients from the platform (1) and touch the **IT** button (7).

**Notes:**

- Symbols **EEEE** on the display (2) indicate exceeding of the scale maximal capacity of **10 kg**, remove food products from the scale immediately to prevent its damage.
- The symbol **UnitSt** on the display (3) indicates that the weight of the products on the scale is unstable or the scale is placed on an unsteady surface. Place the scale on a flat steady surface.
- The scale will be switched off automatically after **2 minutes** of non-operation.

**TARE FUNCTION**  
If you want to measure the weight of several ingredients without removing the previous ones from the platform (1), proceed as follows.

1. Place the scale on a flat surface.
2. To switch the scale on, touch the **IT** button (7), the symbol **Lo** will appear on the display.

**Notes:**

- The symbol **Lo** shown on the display (2) indicates that you can start weighing. If the indications on the display (2) are not equal to zero, touch the **Tare** button (6), the indications will be set to zero.
- Use the scale outdoors.
- Do not use the scale outdoors.
- Avoid getting liquid into the scale body, this appliance is not waterproof. Do not store or use the scale in a room with high humidity (above 80%), make sure you use the scale does not come into contact with water or other liquids as this may cause failure of scale indication or its damage.
- Place the scale on a flat steady surface.
- Do not put food products on the weighing platform if their weight exceeds the maximal capacity of the scale.
- This unit is not intended for usage by children, place the unit away from children.
- The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.
- Do not leave children unattended to prevent using the unit as a toy.

**Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.  
• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.  
**Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

- To avoid damages, transport the unit in the original package only.
- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the batteries in time.
- Keep the unit out of reach of children and disabled persons.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).

**THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.**

**USING THE SCALE**  
**After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.**

- Unpack the scale, remove any stickers that can prevent unit operation.
- Place the weighing platform (1) and the scale body with a soft slightly damp cloth, and then wipe dry.

**Battery installation**

- Open the battery compartment lid (9) and insert a CR2032 battery (supplied with the unit), following the polarity.
- Install the battery compartment lid (9) back to its place.

**Note:** The unit can be supplied with the battery installed in the battery compartment. In this case an isolation insert is inserted preventing discharge. If there is an isolation insert in the battery compartment, remove the battery compartment lid, to remove the isolation insert and install battery compartment lid back to its place.

**Battery replacement**

- When the battery is low, the display (2, 3, 4) contrast reduces and the display (2) shows Lo symbol
- If the scale was switched off because of low battery or the symbol "Lo" appeared on the display (2), replace the battery. For this open the battery compartment lid (9), replace the old battery with a new one, strictly following the polarity, then close the battery compartment lid (9).
- If you are not using the scale for a long time, remove the battery from the battery compartment.

**Operating buttons**  
The operating buttons of the scale are touch-sensitive, so you only need to touch slightly the marked point for each button to activate it.

**CURRENT TIME DISPLAYING**  
If there is a battery in the battery compartment, the current time indication is permanently shown on the display (3) regardless of whether the scale is switched on or not.

**Time setup**

1. Press and hold the **Time** button until the hour indications on the display (3) start flashing.

**Notes:**

- When you install or replace the battery, the time **AM12:00** will be shown on the display (3) and the hours indications will start flashing.
- If you don't press any buttons within 10 seconds, the indications on the display (3) will be shown constantly.

2. Consequently press the button **Time** to set the desired hours. To enter the hours indications press the button **IT**. After you enter the hours data, the minutes indications will start flashing.

**Note:**

- This model uses **12 hour** format of current time indication. When you set the desired time, pay attention to the symbols **AM/PM**, alternately appearing in the left part of the display (3). **AM** indicates time before noon, **PM** - after noon.

3. Consequently press the button **Time** to set the desired minutes. To enter the minutes indications press the button **IT**. Time setup is finished.

**WEIGHING INGREDIENTS**  
**Install the scale on a flat steady surface.**

1. To switch the scale on, touch the button (7) **IT**, first the symbols **HELLO**, and then the symbol **Lo** will appear on the display.

**Notes:**

- The symbol **Lo** shown on the display (2) indicates that you can start weighing.
- When you install or replace the battery, the weight measurement units **g** are used (by default).
- If the indications on the display (2) are not equal to zero, touch the **Tare** button (6). The indications will be set to zero. Select the required weight measurement units by consequently touching the button (5) **Unit**, the following symbols will appear on the display (2):
  - g – weight of food product(s) in grams;
  - oz – weight of product(s) in ounces;
  - kg – weight of product(s) in kilograms.

**Note:**  
- To weight liquid and granular products, place an appropriate container on the platform (1) and then set the display indications to zero by touching

ing the **Tare** button (6). The tare symbol  $\rightarrow$  will appear in the left part of the display (2) if the container weight is more than 500 g.

2. Put the ingredient(s) on the weighing platform (1). The weight of the ingredient(s) will be shown on the display (2), according to the selected measurement units.
3. To switch the scale off, remove the ingredients from the platform (1) and touch the **IT** button (7).

**Notes:**

- Symbols **EEEE** on the display (2) indicate exceeding of the scale maximal capacity of **10 kg**, remove food products from the scale immediately to prevent its damage.
- The symbol **UnitSt** on the display (3) indicates that the weight of the products on the scale is unstable or the scale is placed on an unsteady surface. Place the scale on a flat steady surface.
- The scale will be switched off automatically after **2 minutes** of non-operation.

**TARE FUNCTION**  
If you want to measure the weight of several ingredients without removing the previous ones from the platform (1), proceed as follows.

1. Place the scale on a flat surface.
2. To switch the scale on, touch the **IT** button (7), the symbol **Lo** will appear on the display.

**Notes:**

- The symbol **Lo** shown on the display (2) indicates that you can start weighing. If the indications on the display (2) are not equal to zero, touch the **Tare** button (6), the indications will be set to zero.
- Use the scale outdoors.
- Do not use the scale outdoors.
- Avoid getting liquid into the scale body, this appliance is not waterproof. Do not store or use the scale in a room with high humidity (above 80%), make sure you use the scale does not come into contact with water or other liquids as this may cause failure of scale indication or its damage.
- Place the scale on a flat steady surface.
- Do not put food products on the weighing platform if their weight exceeds the maximal capacity of the scale.
- This unit is not intended for usage by children, place the unit away from children.
- The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.
- Do not leave children unattended to prevent using the unit as a toy.

**Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.  
• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.  
**Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

- To avoid damages, transport the unit in the original package only.
- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the batteries in time.
- Keep the unit out of reach of children and disabled persons.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).

**THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.**

**USING THE SCALE**  
**After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.**

- Unpack the scale, remove any stickers that can prevent unit operation.
- Place the weighing platform (1) and the scale body with a soft slightly damp cloth, and then wipe dry.

**Battery installation**

- Open the battery compartment lid (9) and insert a CR2032 battery (supplied with the unit), following the polarity.
- Install the battery compartment lid (9) back to its place.

**Note:** The unit can be supplied with the battery installed in the battery compartment. In this case an isolation insert is inserted preventing discharge. If there is an isolation insert in the battery compartment, remove the battery compartment lid, to remove the isolation insert and install battery compartment lid back to its place.

**Battery replacement**

- When the battery is low, the display (2, 3, 4) contrast reduces and the display (2) shows Lo symbol
- If the scale was switched off because of low battery or the symbol "Lo" appeared on the display (2), replace the battery. For this open the battery compartment lid (9), replace the old battery with a new one, strictly following the polarity, then close the battery compartment lid (9).
- If you are not using the scale for a long time, remove the battery from the battery compartment.

**Operating buttons**  
The operating buttons of the scale are touch-sensitive, so you only need to touch slightly the marked point for each button to activate it.

**CURRENT TIME DISPLAYING**  
If there is a battery in the battery compartment, the current time indication is permanently shown on the display (3) regardless of whether the scale is switched on or not.

**Time setup**

1. Press and hold the **Time** button until the hour indications on the display (3) start flashing.

**Notes:**

- When you install or replace the battery, the time **AM12:00** will be shown on the display (3) and the hours indications will start flashing.
- If you don't press any buttons within 10 seconds, the indications on the display (3) will be shown constantly.

2. Consequently press the button **Time** to set the desired hours. To enter the hours indications press the button **IT**. After you enter the hours data, the minutes indications will start flashing.

**Note:**

- This model uses **12 hour** format of current time indication. When you set the desired time, pay attention to the symbols **AM/PM**, alternately appearing in the left part of the display (3). **AM** indicates time before noon, **PM** - after noon.

3. Consequently press the button **Time** to set the desired minutes. To enter the minutes indications press the button **IT**. Time setup is finished.

**WEIGHING INGREDIENTS**  
**Install the scale on a flat steady surface.**

1. To switch the scale on, touch the button (7) **IT**, first the symbols **HELLO**, and then the symbol **Lo** will appear on the display.

**Notes:**

- The symbol **Lo** shown on the display (2) indicates that you can start weighing.
- When you install or replace the battery, the weight measurement units **g** are used (by default).
- If the indications on the display (2) are not equal to zero, touch the **Tare** button (6). The indications will be set to zero. Select the required weight measurement units by consequently touching the button (5) **Unit**, the following symbols will appear on the display (2):
  - g – weight of food product(s) in grams;
  - oz – weight of product(s) in ounces;
  - kg – weight of product(s) in kilograms.

**Note:**  
- To weight liquid and granular products, place an appropriate container on the platform (1) and then set the display indications to zero by touching

## РУССКИЙ

показания дисплея. На дисплее (2) с левой стороны появится символ компенсации массы тары  $\rightarrow$  при условии, если ее величина более 500 г.

2. Поместите ингредиенты (ингредиенты) для взвешивания на платформу (1). На дисплее (2) отобразятся все измеренные (ингредиенты) в соответствии с выбранными единицами измерения.
3. Для выключения веса уберите ингредиенты с платформы (1) и прикоснитесь к кнопке (7) **IT**.

**Примечание:**  
- Появление на дисплее (2) символа **EEEE** указывает на превышение максимальной допустимого веса **10 кг**, срочно уберите груз с веса, чтобы предотвратить их повреждение.

- Появление на дисплее (3) символа **UnitSt** указывает на то, что вес на весах нестабилен или вес размещен на неустойчивой поверхности. Разместите вес на ровной устойчивой поверхности.
- Вес автоматически отключается, если вы им не пользуетесь более **2 минут**.

**ПОСЛЕДОВАТЕЛЬНОЕ ВЗВЕШИВАНИЕ**  
Если вы хотите последовательно измерить вес нескольких ингредиентов, не убирая предыдущие ингредиенты с платформы (1), выполните перечисленные ниже шаги.

1. Установите весы на ровную поверхность.
2. Для включения веса прикоснитесь к кнопке (7) **IT**, при этом на дисплее отобразится символ **Lo**.

**Примечание:**  
- Обращение на дисплее (2) символа **Lo** указывает на то, что можно начинать взвешивание. Если показания на дисплее (2) не равны нулю, прикоснитесь к кнопке (6) **Tare**, показания обнулятся.

3. Последовательно касаясь кнопки (5)

